



Step 1- Measure the inside dimensions of drawer.

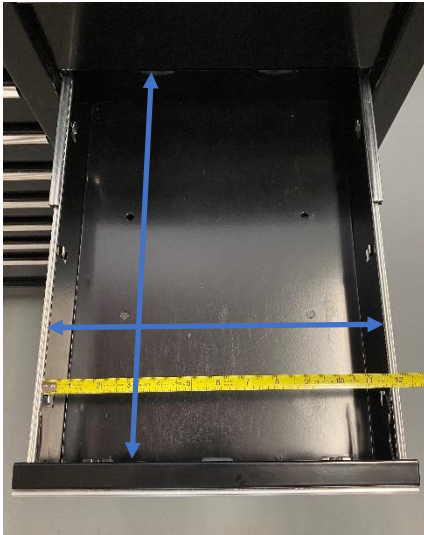

Measure and record width and depth of drawer to nearest 1/16"

Step 2 - Draw outline border on neutral background and label the dimensions.

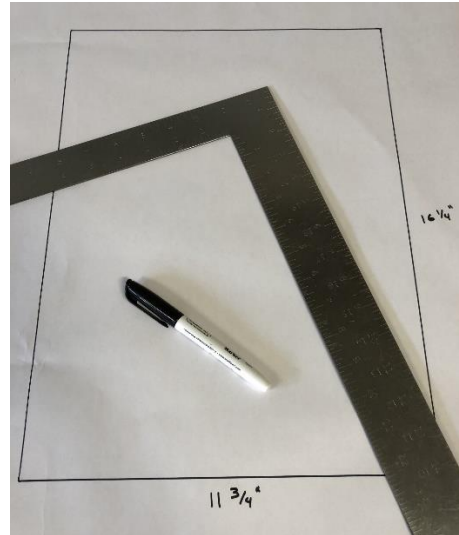

Step 3- Lay out your tools and take overhead picture.



- Have good lighting in the area and turn on camera flash.
- Hold camera directly over the center of the layout, and be 3-4 feet above the tools.



- Capture the entire outline area. It is okay to have other objects, like your feet in the picture.